



A-控制芯架外部接线				
	a	b	c	d
1	FU3-2	FU4-2	FU5-2	T-14
2	T-6	T-9	FU2-2	T-4
3	T-7	T-10	X3-18	T-15
4	X3-19	X3-7		X3-12
5	X5-9	X5-2	X5-7	X3-3
6	X5-15	X5-13	X5-10	X5-5
7	X5-12	X5-3	X5-4	X5-16
8	X5-11	X5-6	X5-1	
9	11Z-8	11Z-1	X5-8	X2-10
10		X3-16	X3-15	X2-5
11	{X3-8}	X3-1	X3-2	X3-6
12	{X3-9}	<b>X3-13</b>		
13			X4-2	X4-1
14		X5-17	X2-12	X3-5
15	X2-9	X2-8	X2-7	X2-6
16	X2-15	X2-14	T-11	T-12
17	X2-3			
18			X4-3	X4-4

